







## Thule Rapid System Kit 1018

# > Instructions

HONDA Accord, 4-dr Sedan, 93-98 (EUR)

ROVER 600-serie, 4-dr Sedan, 93-99

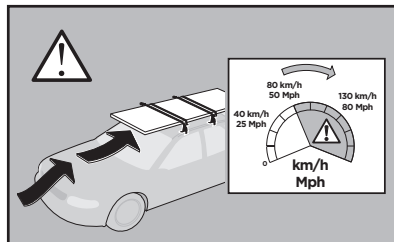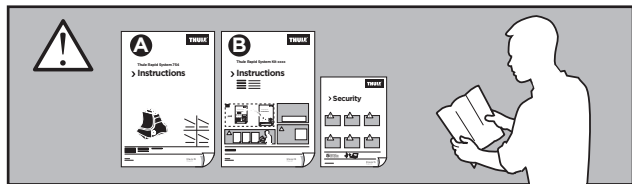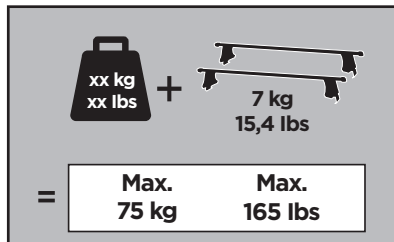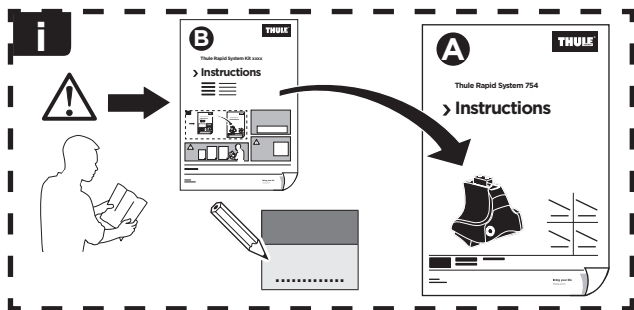

ISO 11154-E


141018

C.20130619  
519-1018-01

Bring your life  
thule.com



04 x4



06 x4






x1



x1

1

	X (scale)	X (mm)	X (inch)
<b>HONDA Accord</b> , 4-dr Sedan, 93-98 (EUR)	29	941	37
<b>ROVER 600-serie</b> , 4-dr Sedan, 93-99	29	941	37

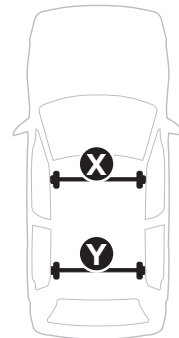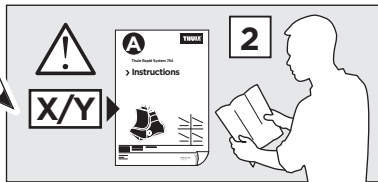
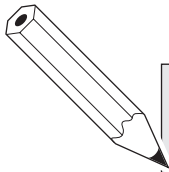



	Y (scale)	Y (mm)	Y (inch)
<b>HONDA Accord</b> , 4-dr Sedan, 93-98 (EUR)	28	931	36 <sup>5</sup> / <sub>8</sub>
<b>ROVER 600-serie</b> , 4-dr Sedan, 93-99	28	931	36 <sup>5</sup> / <sub>8</sub>

2

HONDA Accord, 4-dr Sedan, 93-98 (EUR)

ROVER 600-serie, 4-dr Sedan, 93-99

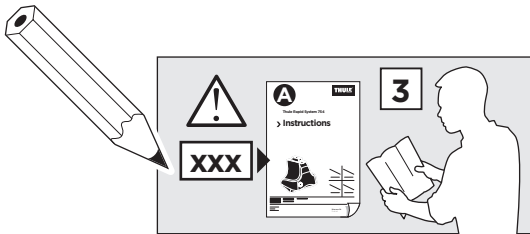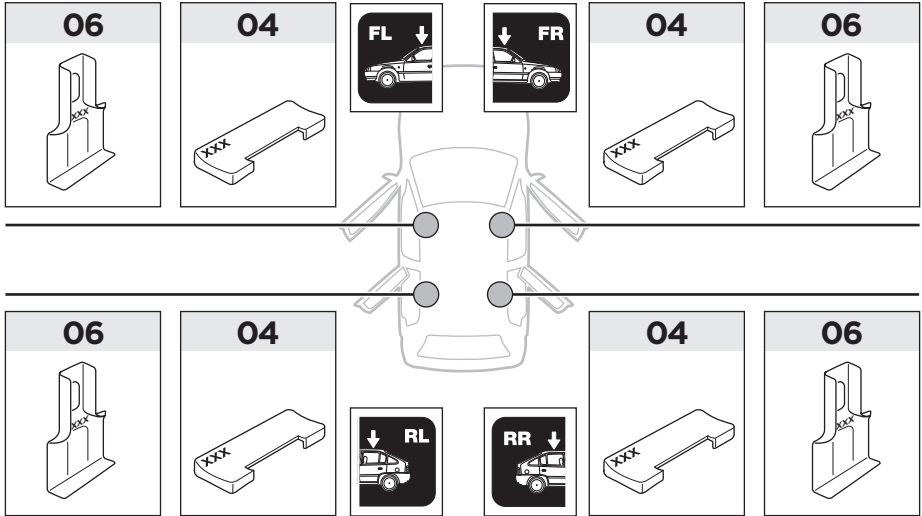

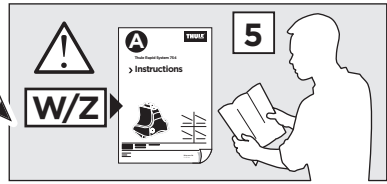**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HONDA Accord</b> , 4-dr Sedan, 93-98 (EUR)	<b>230</b>	<b>700</b>	<b>9</b>	<b>27 1/2</b>
<b>ROVER 600-serie</b> , 4-dr Sedan, 93-99	<b>230</b>	<b>700</b>	<b>9</b>	<b>27 1/2</b>

